16Mx64 REGISTERED SYNCHRONOUS DRAM MERCU 219 PBGA Multi-Chip Package



WEDPN16M64VR-XB2X

FEATURES

- Registered for enhanced performace of bus speeds
 - 100, 125, 133MHz
- Package:
 - 219 Plastic Ball Grid Array (PBGA), 25 x 25mm
- Single 3.3V ±0.3V power supply
- Fully Synchronous; all signals registered on positive edge of system clock cycle
- Internal pipelined operation; column address can be changed every clock cycle
- Internal banks for hiding row access/precharge
- Programmable Burst length 1,2,4,8 or full page
- 8,192 refresh cycles
- Commercial, Industrial and Military Temperature Ranges
- Organized as 16M x 64
 - User configureable as 2 x 16M x 32
- Weight: WEDPN16M64VR-XB2X 2.5 grams typical

BENEFITS

- 51% SPACE SAVINGS
- 17% I/O Reduction
- Reduced part count
- Reduced trace lengths for lower parasitic capacitance
- Glue-less connection to memory controller/PCI Bridge
- Suitable for hi-reliability applications

GENERAL DESCRIPTION

The 128MByte (1Gb) SDRAM is a high-speed CMOS, dynamic random-access, memory using 4 chips containing 268,435,456 bits. Each chip is internally configured as a quad-bank DRAM with a synchronous interface. Each of the chip's 67,108,864-bit banks is organized as 8,192 rows by 512 columns by 16 bits. The MCP also incorporates two 16-bit universal bus drivers for input control signals and addresses.

Read and write accesses to the SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an ACTIVE command, which is then followed by a READ or WRITE command. The address bits registered coincident with the ACTIVE command are used to select the bank and row to be accessed (BA0, BA1 select the bank; A0-12 select the row). The address bits registered coincident with the READ or WRITE command are used to select the starting column location for the burst access.

The SDRAM provides for programmable READ or WRITE burst lengths of 1, 2, 4 or 8 locations, or the full page, with a burst terminate option. An AUTO PRECHARGE function may be enabled to provide a self-timed row precharge that is initiated at the end of the burst sequence.

The 1Gb SDRAM uses an internal pipelined architecture to achieve high-speed operation. This architecture is compatible with the 2n rule of prefetch architectures, but it also allows the column address to be changed on every clock cycle to achieve a high-speed, fully random access. Precharging one bank while accessing one of the other three banks will hide the precharge cycles and provide seamless, high-speed, random-access operation.

The 1Gb SDRAM is designed to operate in 3.3V, low-power memory systems. An auto refresh mode is provided, along with a power-saving, power-down mode.

All inputs and outputs are LVTTL compatible. SDRAMs offer substantial advances in DRAM operating performance, including the ability to synchronously burst data at a high data rate with automatic column-address generation, the ability to interleave between internal banks in order to hide precharge time and the capability to randomly change column addresses on each clock cycle during a burst access.

^{*} This product is subject to change without notice.

FIGURE 1 – PIN CONFIGURATION

Top View

_	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Α		(DQ0)	DQ14	DQ15	Vss	Vss	(A9)	(A10)	(A11)	(A8)	Vcc	Vcc	DQ16	DQ17	DQ31	Vss
В	DQ1	(DQ2)	DQ12	DQ13	Vss	Vss	(A0)	(A7)	(A6)	(A1)	Vcc	Vcc	DQ18	DQ19	DQ29	DQ30
С	DQ3	DQ4	DQ10	(DQ11)	Vcc	Vcc	(A2)	(A5)	(A4)	(A3)	Vss	Vss	DQ20	(DQ21)	DQ27	DQ28
D	DQ6	DQ5	DQ8	DQ9	Vcc	Vcc	(A12)	DNU	DNU	DNU	Vss	Vss	DQ22	DQ23	DQ26	DQ25
Е	DQ7	(DQMB0)	Vcc	DQMB1)	NC	NC	NC	(BA0)	(BA1)	NC	NC	NC	DQMB2	Vss	NC	DQ24
F	CAS#	WE#	Vcc	(CLK0)	NC							NC	OE#	Vss	DQMB3	(CLK1)
G	CS0#	RAS#	Vcc	CKE	NC							NC	CS1#	Vss	NC	LE#
Н	Vss	Vss	Vcc	Vcc	Vss							Vcc	Vss	Vss	Vcc	Vcc
J	Vss	Vss	Vcc	Vcc	Vss							Vcc	Vss	Vss	Vcc	Vcc
K	NC	NC	Vcc	NC	NC							NC	NC	Vss	NC	DNU
L	NC	NC	Vcc	NC	NC							NC	CLK2	Vss	NC	NC
М	DQ56	DQMB7	Vcc	NC	DQMB6	NC	NC	NC	NC	NC	NC	NC	DQMB5	Vss	DQMB4	DQ39
N	DQ57	DQ58	DQ55	DQ54	NC	NC	NC	NC	NC	NC	NC	NC	DQ41	DQ40	DQ37	DQ38
Р	DQ60	DQ59	DQ53	DQ52	Vss	Vss	NC	NC	NC	NC	Vcc	Vcc	DQ43	DQ42	DQ36	DQ35
R	DQ62	DQ61	DQ51	DQ50	Vcc	Vcc	NC	NC	NC	NC	Vss	Vss	DQ45	DQ44	DQ34	DQ33
Т	Vss	DQ63	DQ49	DQ48	Vcc	Vcc	NC	NC	NC	NC	Vss	Vss	DQ47	DQ46	DQ32	Vcc

NOTE: DNU = Do Not Use; to be left unconnected for future upgrades.

NC = Not Connected Internally.

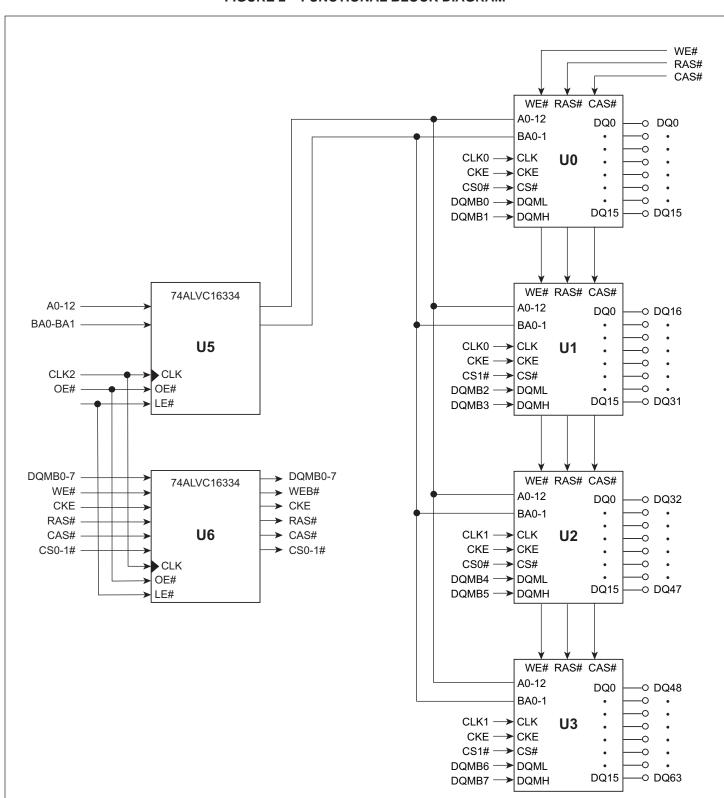


FIGURE 2 – FUNCTIONAL BLOCK DIAGRAM

FUNCTIONAL DESCRIPTION

Read and write accesses to the SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an ACTIVE command which is then followed by a READ or WRITE command. The address bits registered coincident with the ACTIVE command are used to select the bank and row to be accessed (BA0 and BA1 select the bank, A0-12 select the row). The address bits (A0-8) registered coincident with the READ or WRITE command are used to select the starting column location for the burst access.

Prior to normal operation, the SDRAM must be initialized. The following sections provide detailed information covering device initialization, register definition, command descriptions and device operation.

INITIALIZATION

SDRAMs must be powered up and initialized in a predefined manner. Operational procedures other than those specified may result in undefined operation. Once power is applied to Vcc and Vccq (simultaneously) and the clock is stable (stable clock is defined as a signal cycling within timing constraints specified for the clock pin), the SDRAM requires a 100 μ s delay prior to issuing any command other than a COMMAND INHIBIT or a NOP. Starting at some point during this 100 μ s period and continuing at least through the end of this period, COMMAND INHIBIT or NOP commands should be applied.

Once the 100 μ s delay has been satisfied with at least one COMMAND INHIBIT or NOP command having been applied, a PRECHARGE command should be applied. All banks must be precharged, thereby placing the device in the all banks idle state.

Once in the idle state, two AUTO REFRESH cycles must be performed. After the AUTO REFRESH cycles are complete, the SDRAM is ready for Mode Register programming. Because the Mode Register will power up in an unknown state, it should be loaded prior to applying any operational command.

REGISTER DEFINITION

MODE REGISTER

The Mode Register is used to define the specific mode of operation of the SDRAM. This definition includes the selec-tion of a burst length, a burst type, a CAS latency, an operating mode and a write burst mode, as shown in Figure 3. The Mode Register is programmed via the LOAD MODE REGISTER command and will retain the stored information until it is programmed again or the device loses power.

Mode register bits M0-M2 specify the burst length, M3 specifies the type of burst (sequential or interleaved), M4-M6 specify the CAS latency, M7 and M8 specify the operating mode, M9 specifies the WRITE burst mode, and M10 and M11 are reserved for future use. Address A12 (M12) is undefined but should be driven LOW during loading of the mode register.

The Mode Register must be loaded when all banks are idle, and

the controller must wait the specified time before initiating the subsequent operation. Violating either of these requirements will result in unspecified operation.

BURST LENGTH

Read and write accesses to the SDRAM are burst oriented, with the burst length being programmable, as shown in Figure 3. The burst length determines the maximum number of column locations that can be accessed for a given READ or WRITE command. Burst lengths of 1, 2, 4 or 8 locations are available for both the sequential and the interleaved burst types, and a full-page burst is available for the sequential type. The full-page burst is used in conjunction with the BURST TERMINATE command to generate arbitrary burst lengths.

Reserved states should not be used, as unknown operation or incompatibility with future versions may result.

When a READ or WRITE command is issued, a block of columns equal to the burst length is effectively selected. All accesses for that burst take place within this block, meaning that the burst will wrap within the block if a boundary is reached. The block is uniquely selected by A1-8 when the burst length is set to two; by A2-8 when the burst length is set to four; and by A3-8 when the burst length is set to eight. The remaining (least significant) address bit(s) is (are) used to select the starting location within the block. Full-page bursts wrap within the page if the boundary is reached.

BURST TYPE

Accesses within a given burst may be programmed to be either sequential or interleaved; this is referred to as the burst type and is selected via bit M3.

The ordering of accesses within a burst is determined by the burst length, the burst type and the starting column address, as shown in Table 1.

CAS LATENCY

The CAS latency is the delay, in clock cycles, between the registration of a READ command and the availability of the first piece of output data. The latency can be set to two or three clocks.


If a READ command is registered at clock edge n, and the latency is m clocks, the data will be available by clock edge n+m. The l/0 Os will start driving as a result of the clock edge one cycle earlier (n+m-1), and provided that the relevant access times are met, the data will be valid by clock edge n+m. For example, assuming that the clock cycle time is such that all relevant access times are met, if a READ command is registered at T0 and the latency is programmed to two clocks, the l/0s will start driving after T1 and the data will be valid by T2. Table 2 below indicates the operating frequencies at which each CAS latency setting can be used.

Reserved states should not be used as unknown operation or incompatibility with future versions may result.

OPERATING MODE

The normal operating mode is selected by setting M7 and M8 to zero; the other combinations of values for M7 and M8 are reserved

FIGURE 1 – MODE REGISTER DEFINITION

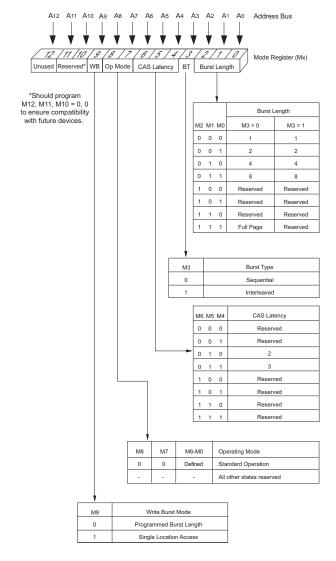

for future use and/or test modes. The programmed burst length applies to both READ and WRITE bursts.

Test modes and reserved states should not be used because unknown operation or incompatibility with future versions may result.

WRITE BURST MODE

When M9 = 0, the burst length programmed via M0-M2 applies to both READ and WRITE bursts; when M9 = 1, the programmed burst length applies to READ bursts, but write accesses are single-location (nonburst) accesses

TABLE 1 – BURST DEFINITION

Burst	Start	ing Co	lumn	Order of Accesses Within a Burst					
Length	1	Addres	s	Type = Sequential	Type = Interleaved				
			A0						
2			0	0-1	0-1				
			1	1-0	1-0				
		A1	A0						
		0	0	0-1-2-3	0-1-2-3				
4		0	1	1-2-3-0	1-0-3-2				
		1	0	2-3-0-1	2-3-0-1				
		1	1	3-0-1-2	3-2-1-0				
	A2	A1	A0						
	0	0	0	0-1-2-3-4-5-6-7	0-1-2-3-4-5-6-7				
	0	0	1	1-2-3-4-5-6-7-0	1-0-3-2-5-4-7-6				
	0	1	0	2-3-4-5-6-7-0-1	2-3-0-1-6-7-4-5				
8	0	1	1	3-4-5-6-7-0-1-2	3-2-1-0-7-6-5-4				
	1	0	0	4-5-6-7-0-1-2-3	4-5-6-7-0-1-2-3				
	1	0	1	5-6-7-0-1-2-3-4	5-4-7-6-1-0-3-2				
	1	1	0	6-7-0-1-2-3-4-5	6-7-4-5-2-3-0-1				
	1	1	1	7-0-1-2-3-4-5-6	7-6-5-4-3-2-1-0				
Full	n	= A0-9/8	3/7	Cn, Cn + 1, Cn + 2 Cn + 3, Cn + 4					
Page (y)	(lo	ocation 0	-y)	Cn - 1, Cn	Not Supported				

NOTES:

- 1. For full-page accesses: y = 512.
- For a burst length of two, A1-8 select the block-of-two burst; A0 selects the starting column within the block.
- For a burst length of four, A2-8 select the block-of-four burst; A0-1 select the starting column within the block.
- For a burst length of eight, A3-8 select the block-of-eight burst; A0-2 select the starting column within the block.
- 5. For a full-page burst, the full row is selected and A0-8 select the starting column.
- Whenever a boundary of the block is reached within a given sequence above, the following access wraps within the block.
- For a burst length of one, A0-8 select the unique column to be accessed, and Mode Register bit M3 is ignored.

TABLE 2 - CAS LATENCY

	ALLOWABLE OPERATING FREQUENCY (MHz)						
SPEED	CAS LATENCY = 2	CAS LATENCY = 3					
-133	≤100	≤133					
-125	≤100	≤125					
-100	≤66	≤100					

COMMANDS

The Truth Table provides a quick reference of available commands. This is followed by a written description of each command. Three additional Truth Tables appear following the Operation section; these tables provide current state/next state information.

COMMAND INHIBIT

The COMMAND INHIBIT function prevents new commands from

CLK COMMAND READ NOP NOP tor **D**оит I/O DON'T CARE CAS Latency = 2 WW UNDEFINED Т1 CLK COMMAND RFAD NOP NOP t_{LZ} t_{OH} Dout I/O CAS Latency = 3

FIGURE 4 - CAS LATENCY

being executed by the SDRAM, regardless of whether the CLK signal is enabled. The SDRAM is effectively deselected. Operations already in progress are not affected.

NO OPERATION (NOP)

The NO OPERATION (NOP) command is used to perform a NOP to an SDRAM which is selected (CS is LOW). This prevents unwanted commands from being registered during idle or wait states. Operations already in progress are not affected.

LOAD MODE REGISTER

The Mode Register is loaded via inputs A0-11. See Mode Register heading in the Register Definition section. The LOAD MODE REGISTER command can only be issued when all banks are idle, and a subsequent executable command cannot be issued until tMRD is met.

ACTIVE

The ACTIVE command is used to open (or activate) a row in a particular bank for a subsequent access. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0-A12 selects the row. This row remains active (or open) for accesses until a PRECHARGE command is issued to that bank. A PRECHARGE command must be issued before opening a different row in the same bank.

READ

The READ command is used to initiate a burst read access to an active row. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0-8 selects the starting column

location. The value on input A10 determines whether or not AUTO PRECHARGE is used. If AUTO PRECHARGE is selected, the row being accessed will be precharged at the end of the READ burst; if AUTO PRECHARGE is not selected, the row will remain open for subsequent accesses. Read data appears on the I/Os subject to the logic level on the DQM inputs two clocks earlier. If a given DQM signal was registered HIGH, the corresponding I/Os will be High-Z two clocks later; if the DQM signal was registered LOW, the I/Os will provide valid data.

WRITE

The WRITE command is used to initiate a burst write access to an active row. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0-8 selects the starting column location. The value on input A10 determines whether or not AUTO PRECHARGE is used. If AUTO PRECHARGE is selected, the row being accessed will be precharged at the end of the WRITE burst; if AUTO PRECHARGE is not selected, the row will remain open for subsequent accesses. Input data appearing on the I/Os is written to the memory array subject to the DQM input logic level appearing coincident with the data. If a given DQM signal is registered LOW, the corresponding data will be written to memory; if the DQM signal is registered HIGH, the corresponding data inputs will be ignored, and a WRITE will not be executed to that byte/column location.

PRECHARGE

The PRECHARGE command is used to deactivate the open row in a particular bank or the open row in all banks. The bank(s) will be available for a subsequent row access a specified time (t_{RP}) after the PRECHARGE command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case

TRUTH TABLE — COMMANDS AND DQM OPERATION (NOTE 1)

NAME (FUNCTION)	CS#	RAS#	CAS#	WE#	DQM	ADDR	I/Os
COMMAND INHIBIT (NOP)	Н	Х	Х	Х	Х	Х	Х
NO OPERATION (NOP)	L	Н	Н	Н	Х	Х	Х
ACTIVE (Select bank and activate row) (3)	L	L	Н	Н	Х	Bank/Row	Х
READ (Select bank and column, and start READ burst) (4)	L	Н	L	Н	L/H ⁸	Bank/Col	Х
WRITE (Select bank and column, and start WRITE burst) (4)	L	Н	L	L	L/H ⁸	Bank/Col	Valid
BURST TERMINATE	L	Н	Н	L	Х	Х	Active
PRECHARGE (Deactivate row in bank or banks) (5)	L	L	Н	L	Х	Code	Х
AUTO REFRESH or SELF REFRESH (Enter self refresh mode) (6, 7)	L	L	L	Н	Х	Х	Х
LOAD MODE REGISTER (2)	L	L	L	L	Х	Op-Code	Х
Write Enable/Output Enable (8)	_	_	_	_	L	_	Active
Write Inhibit/Output High-Z (8)	_	_	_	_	Н	_	High-Z

NOTES:

- 1. CKE is HIGH for all commands shown except SELF REFRESH.
- 2. A0-11 define the op-code written to the Mode Register.
- 3. A0-12 provide row address, and BA0, BA1 determine which bank is made active.
- A0-8 provide column address; A10 HIGH enables the auto precharge feature (nonpersistent), while A10 LOW disables the auto precharge feature; BA0, BA1 determine which bank is being read from or written to.
- A10 LOW: BA0, BA1 determine the bank being precharged. A10 HIGH: All banks precharged and BA0, BA1 are "Don't Care."

where only one bank is to be precharged, inputs BA0, BA1 select the bank. Otherwise BA0, BA1 are treated as "Don't Care." Once a bank has been precharged, it is in the idle state and must be activated prior to any READ or WRITE commands being issued to that bank.

AUTO PRECHARGE

AUTO PRECHARGE is a feature which performs the same individual-bank PRECHARGE function described above, without requiring an explicit command. This is accomplished by using A10 to enable AUTO PRECHARGE in conjunction with a specific READ or WRITE command. A precharge of the bank/row that is addressed with the READ or WRITE command is automatically performed upon completion of the READ or WRITE burst, except in the full-page burst mode, where AUTO PRECHARGE does not apply. AUTO PRECHARGE is nonpersistent in that it is either enabled or disabled for each individual READ or WRITE command.

AUTO PRECHARGE ensures that the precharge is initiated at the earliest valid stage within a burst. The user must not issue another command to the same bank until the precharge time (t_{RP}) is completed. This is determined as if an explicit PRECHARGE command was issued at the earliest possible time.

BURST TERMINATE

The BURST TERMINATE command is used to truncate either fixed-length or full-page bursts. The most recently registered READ or WRITE command prior to the BURST TERMINATE command will be truncated.

AUTO REFRESH

AUTO REFRESH is used during normal operation of the SDRAM and is analogous to CAS-BEFORE-RAS (CBR) REFRESH in conventional DRAMs. This command is nonpersistent, so it must

- 6. This command is AUTO REFRESH if CKE is HIGH; SELF REFRESH if CKE is LOW.
- Internal refresh counter controls row addressing; all inputs and I/Os are "Don't Care" except for CKE.
- Activates or deactivates the I/Os during WRITEs (zero-clock delay) and READs (two-clock delay)

REGISTER FUNCTION TABLE

	INPUTS								
OE#	LE#	Α	Y						
Н	Х	Χ	Х	Z					
L	L	Χ	L	L					
L	L	Χ	Н	н					
L	Н	1	L	L					
L	Н	1	Н	н					
L	Н	L or H	Χ	Yo(1)					

NOTES: 1. Output level before the indicated steady-state input conditions were established.

be issued each time a refresh is required.

The addressing is generated by the internal refresh controller. This makes the address bits "Don't Care" during an AUTO REFRESH command. Each 256Mb SDRAM requires 8,192 AUTO REFRESH cycles every refresh period (tREF). Providing a distributed AUTO REFRESH command will meet the refresh requirement and ensure that each row is refreshed. Alternatively, 8,192 AUTO REFRESH commands can be issued in a burst at the minimum cycle rate (tRC), once every refresh period (tREF).

SELF REFRESH*

The SELF REFRESH command can be used to retain data in the SDRAM, even if the rest of the system is powered down. When in the self refresh mode, the SDRAM retains data without external clocking. The SELF REFRESH command is initiated like an AUTO REFRESH command except CKE is disabled (LOW). Once the SELF REFRESH command is registered, all the inputs to the SDRAM become "Don't Care," with the exception of CKE, which must remain LOW.

Once self refresh mode is engaged, the SDRAM provides its own internal clocking, causing it to perform its own AUTO REFRESH cycles. The SDRAM must remain in self refresh mode for a minimum period equal to t_{RAS} and may remain in self refresh mode for an indefinite period beyond that.

The procedure for exiting self refresh requires a sequence of commands. First, CLK must be stable (stable clock is defined as a signal cycling within timing constraints specified for the clock pin) prior to CKE going back HIGH. Once CKE is HIGH, the SDRAM

ABSOLUTE MAXIMUM RATINGS

Parameter		Unit
Voltage on Vcc, VccqSupply relative to Vss	-1 to 4.6	V
Voltage on NC or I/O pins relative to Vss	-1 to 4.6	V
Operating Temperature T _A (Mil)	-55 to +125	°C
Operating Temperature T _A (Ind)	-40 to +85	°C
Storage Temperature, Plastic	-55 to +125	°C

NOTE:

Stress greater than those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only and functional operation of the device at these or any other conditions greater than those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect reliability.

must have NOP commands issued (a minimum of two clocks) for $t_{\rm XSR}$, because time is required for the completion of any internal refresh in progress.

Upon exiting the self refresh mode, AUTO REFRESH commands must be issued as both SELF REFRESH and AUTO REFRESH utilize the row refresh counter.

CAPACITANCE (NOTE 2)

Parameter	Symbol	Max	Unit
Input Capacitance: CLK	C _{I1}	14	pF
Addresses, BA0-1 Input Capacitance	CA	7	pF
Input Capacitance: All other input-only pins	C ₁₂	8	pF
Input/Output Capacitance: I/Os	Сю	8	pF
Register Functions OE/LE	Creg	14	pF

BGA THERMAL RESISTANCE

Description	Symbol	Max	Unit	Notes
Junction to Ambient (No Airflow)	θЈА	16.8	°C/W	1
Junction to Ball	θЈВ	12.2	°C/W	1
Junction to Case (Top)	θЈС	6.5	°C/W	1

NOTE: Refer to PBGA Thermal Resistance Correlation Application note at www.whiteedc.com in the application notes section for modeling conditions.

DC ELECTRICAL CHARACTERISTICS AND OPERATING CONDITIONS (NOTES 1, 6)

 $V_{CC} = +3.3V \pm 0.3V; -55^{\circ}C \le T_A \le +125^{\circ}C$

Parameter/Condition	Symbol	Min	Max	Units
Supply Voltage	Vcc	3	3.6	V
Input High Voltage: Logic 1; All inputs (21)	VIH	2	Vcc + 0.3	V
Input Low Voltage: Logic 0; All inputs (21)	VIL	-0.3	0.8	V
Input Leakage Current: Any input 0V VIN Vcc (All other pins not under test = 0V)	lı	-5	5	μΑ
Output Leakage Current: I/Os are disabled; 0V Vout Vcc	loz	-5	5	μΑ
Output High Voltage (Iout = -4mA)	Voн	2.4	-	V
Output Low Voltage (Iouт = 4mA)	V _{OL}	_	0.4	V

IDD SPECIFICATIONS AND CONDITIONS (NOTES 1,6,11,13)

 V_{CC} = +3.3V ±0.3V; -55°C \leq T_A \leq +125°C

Parameter/Condition	Symbol	Max	Units
Operating Current: Active Mode; Burst = 2; Read or Write; t _{RC} = t _{RC} (min); CAS latency = 3 (3, 18, 19)	lcc1	700	mA
Standby Current: Active Mode; CKE = HIGH; CS# = HIGH; All banks active after tracp met; No accesses in progress (3, 12, 19)	Іссз	240	mA
Operating Current: Burst Mode; Continuous burst; Read or Write; All banks active; CAS latency = 3 (3, 18, 19)	Icc4	750	mA
Self Refresh Current: CKE 0.2V Commercial and Industrial temperatures only (27, 28)	Icc7	10	mA

^{*} Self refresh available in commercial and industrial temperatures only.

ELECTRICAL CHARACTERISTICS AND RECOMMENDED AC OPERATING CHARACTERISTICS

(NOTES 5, 6, 8, 9, 11, 29)

			<u>-1</u>	<u>33</u>	<u>-1</u> :	<u>25</u>	<u>-1</u>	00	
Parameter		Symbol	Min	Max	Min	Max	Min	Max	Unit
Access time from CLK (pos. edge)	CL = 3	tac		5.4		5.8		6	ns
Access time nom CER (pos. eage)	CL = 2	tac		6		6		6	ns
Address hold time		tан	0.8		1		1		ns
Address setup time		tas	1.5		2		2		ns
CLK high-level width		tсн	2.5		3		3		ns
CLK low-level width		tcL	2.5		3		3		ns
Clock cycle time (22)	CL = 3	tск	7.5		8		10		ns
Clock cycle time (22)	CL = 2	tск	10		10		15		ns
CKE hold time		tскн	0.8		1		1		ns
CKE setup time		tcks	1.5		2		2		ns
CS#, RAS#, CAS#, WE#, DQM hold time		tсмн	0.8		1		1		ns
CS#, RAS#, CAS#, WE#, DQM setup time		tcms	1.5		2		2		ns
Data-in hold time		tон	0.8		1		1		ns
Data-in setup time		tos	1.5		2		2		ns
Date out high impedance time (10)	CL = 3 (10)	tHZ		5.4		5.8		6	ns
Data-out high-impedance time (10)	CL = 2 (10)	tHZ		6		6		6	ns
Data-out low-impedance time		tız	1		1		1		ns
Data-out hold time (load)		tон	3		3		3		ns
Data-out hold time (no load) (26)		ton _N	1.8		1.8		1.8		ns
ACTIVE to PRECHARGE command		tras	44	120,000	50	120,000	50	120,000	ns
ACTIVE to ACTIVE command period		trc	66		70		70		ns
ACTIVE to READ or WRITE delay		trcd	20		20		20		ns
Refresh period (8,192 rows) – Commercial, I	ndustrial	tref		64		64		64	ms
Refresh period (8,192 rows) – Military		tref		16		16		16	ms
AUTO REFRESH period		trfc	66		70		70		ns
PRECHARGE command period		trp	20		20		20		ns
ACTIVE bank A to ACTIVE bank B command		t _{RRD}	15		20		20		ns
Transition time (7)		t⊤	0.3	1.2	0.3	1.2	0.3	1.2	ns
WRITE recovery time	(23)	turn	1 CLK + 7ns		1 CLK + 7ns		1 CLK + 7ns		_
WINTE TECOVERY UITLE	(24)	twr	15		15		15		ns
Exit SELF REFRESH to ACTIVE command		txsr	75		80		80		ns


AC FUNCTIONAL CHARACTERISTICS

(NOTES 5,6,7,8,9,11,29)

Parameter/Condition	Symbol	-133	-125	-100	Units	
READ/WRITE command to READ/WRITE command (17)		tccp	1	1	1	tск
CKE to clock disable or power-down entry mode (14)			1	1	1	tск
CKE to clock enable or power-down exit setup mode (14)			1	1	1	tск
DQM to input data delay (17)			0	0	0	tск
DQM to data mask during WRITEs			0	0	0	tск
DQM to data high-impedance during READs			2	2	2	tcĸ
WRITE command to input data delay (17)			0	0	0	tcĸ
Data-in to ACTIVE command (15)		tDAL	5	5	4	tск
Data-in to PRECHARGE command (16)		t _{DPL}	2	2	2	tск
Last data-in to burst STOP command (17)		t _{BDL}	1	1	1	tск
Last data-in to new READ/WRITE command (17)		tcdl	1	1	1	tск
Last data-in to PRECHARGE command (16)			2	2	2	tcĸ
LOAD MODE REGISTER command to ACTIVE or REFRESH command (25)	tmrd	2	2	2	tcĸ	
Data at the bight in a data of our DDEGLIADOE and and 4(7)		trон	3	3	3	tcĸ
Data-out to high-impedance from PRECHARGE command (17)	CL = 2	trон	2	2	2	tcĸ

NOTES:


- 1. All voltages referenced to VSS.
- 2. This parameter is not tested but guaranteed by design. f = 1 MHz, T_A = 25°C.
- IDD is dependent on output loading and cycle rates. Specified values are obtained with minimum cycle time and the outputs open.
- 4. Enables on-chip refresh and address counters.
- The minimum specifications are used only to indicate cycle time at which proper operation over the full temperature range is ensured.
- An initial pause of 100µs is required after power-up, followed by two AUTO REFRESH
 commands, before proper device operation is ensured. (Vcc must be powered up
 simultaneously.) The two AUTO REFRESH command wake-ups should be repeated any time
 the tREF refresh requirement is exceeded.
- AC characteristics assume t_T = 1ns.
- In addition to meeting the transition rate specification, the clock and CKE must transit between V_{IH} and V_{IL} (or between V_{IL} and V_{IH}) in a monotonic manner.
- 9. Outputs measured at 1.5V with equivalent load:



- tHZ defines the time at which the output achieves the open circuit condition; it is not a reference to VoH or VoL. The last valid data element will meet toH before going High-Z.
- 11. AC timing and I_{DD} tests have V_{IL} = 0V and V_{IH} = 3V, with timing referenced to 1.5V crossover point.
- Other input signals are allowed to transition no more than once every two clocks and are otherwise at valid V_{IH} or V_{IL} levels.

- 13. Icc specifications are tested after the device is properly initialized.
- 14. Timing actually specified by tcks; clock(s) specified as a reference only at minimum cycle rate.
- Timing actually specified by twn plus txp; clock(s) specified as a reference only at minimum cycle rate.
- 16. Timing actually specified by twr.
- Required clocks are specified by JEDEC functionality and are not dependent on any timing parameter.
- 18. The Icc current will decrease as the CAS latency is reduced. This is due to the fact that the maximum cycle rate is slower as the CAS latency is reduced.
- 19. Address transitions average one transition every two clocks.
- 20. CLK must be toggled a minimum of two times during this period.
- 21. V_{IH} overshoot: V_{IH} (MAX) = V_{CC} + 2V for a pulse width 3ns, and the pulse width cannot be greater than one third of the cycle rate. V_{IL} undershoot: V_{IL} (MIN) = -2V for a pulse width -3ns.
- 22. The clock frequency must remain constant (stable clock is defined as a signal cycling within timing constraints specified for the clock pin) during access or precharge states (READ, WRITE, including twa, and PRECHARGE commands). CKE may be used to reduce the data rate.
- 23. Auto precharge mode only. The precharge timing budget (tRP) begins 7.5ns after the first clock delay, after the last WRITE is executed.
- 24. Precharge mode only.
- 25. JEDEC and PC100 specify three clocks.
- 26. Parameter guaranteed by design.
- 27. Self refresh available in commercial and industrial temperatures only.
- 28. OE# high.
- 29. All AC timings do not count extra clock cycle needed on control signals to be registered.

PACKAGE DIMENSION 'B2': 219 PLASTIC BALL GRID ARRAY (PBGA)

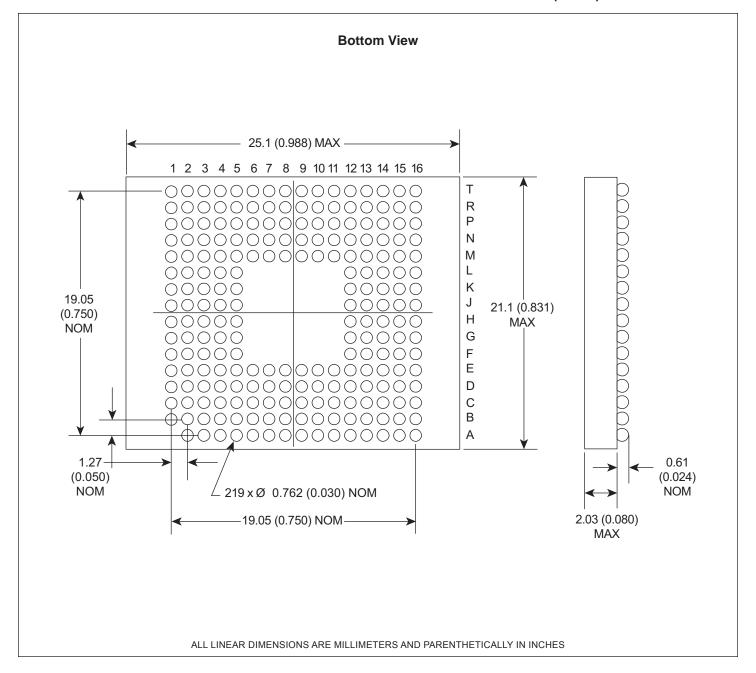

ORDERING INFORMATION

MERCURY SYSTE	MS			
PLASTIC ———				
SDRAM —				
CONFIGURATION,	16 M x 64			
3.3V Power Supply	/			
IMPROVEMENT M R = Registered	ARK —			
FREQUENCY (MH: 133 = 133MHz 125 = 125MHz 100 = 100MHz	z) ————————————————————————————————————			
	II Grid Array (PBGA), 2			
DEVICE GRADE: - M = Military I = Industrial C = Commercial	-55°C to +125°C -40°C to +85°C			

Document Title

16M x 64 Registered Synchronous DRAM

Revision History

Rev#	History	Release Date	Status
Rev 0	Initial Release	January 2005	Final
Rev 1	Changes (Pg. 1-13) 1.1 Change document layout from White Electronic Designs to Microsemi	July 2011	Final
Rev 2	Changes (Pg. All) (ECN 10156) 2.1 Change document layout from Microsemi to Mercury Systems	August 2016	Final

